

**WWW.INFIRE.PL**



**INSTALLATION CARD**  
BIO-FIREPLACE INCYRCLE *weight 34 kg*

**INFIRE KAROL LIPKA  
UL. OBWODOWA 3  
11-500 GAJEWO**

**Kontakt:**  
biuro@infire.pl  
infire@wp.pl

## THIS DOCUMENT IS PART OF THE DEVICE

### INSTALLATION

Please make sure that the set delivered to you contains all the elements, that is:

- fireplace (housing)
- hearth (steel rectangular tank)
- glass and steel mountings for glass panel
- steel long handle for adjusting and extinguishing a flame

1. Choose the room in which you want to use the fireplace. The room in which the device will be used should have a minimum area of 20m<sup>2</sup>.
2. When using the fireplace in a room, the window must be tilted.
3. The room in which the fireplace is used should always be ventilated, as it absorbs oxygen from the air. Do not install the fireplace in a place where it will be exposed to draught!
4. The ceiling bracket is mounted to the ceiling. Depending on the type, it can be pegs fi12 with screw M8 - 4pc.
5. Put the pipe with fasteners into the wider part of the holes on the bracket on the ceiling and turn it clockwise until it stops / locked.
6. After screwing the fireplace pipe, we block it before unscrewing with a M8 screw with an Allen head or another, on one side - we must hit one of the holes.
7. The pipe is connected to the fireplace by turning it (a screw is welded in the fireplace and a threaded sleeve is welded in the pipe).
8. From the inside of the fireplace, we block the rotation of the fireplace with the screw included in the set. **IMPORTANT!** This lock prevents the fireplace from falling.
9. The fireplace can be positioned by loosening the screw inside the fireplace and then tightening it.
10. Place the rectangular steel tank (the hearth) in the rectangular opening inside the fireplace.

11. Insert the glass into the mountings and tighten it from the back using a screwdriver.
12. Do not place any objects on the housing or inside the fireplace.
13. Do not place any flammable materials in a distance of at least 2 m from the device.
14. Convection air slots and rear ventilation should not be obstructed.

Infire is not liable for damage resulting from incorrect installation of the fireplace or from installation of the fireplace on an unsuitable wall/floor.

